

Pemko Commercial Threshold


The global leader in
door opening solutions

Applies to the following products:


174, 1951

Installation Instructions:

1. Carefully cope to fit within the frame opening.
2. Use a sealant or compound at all edges and joints.
3. Fasten with screws provided.

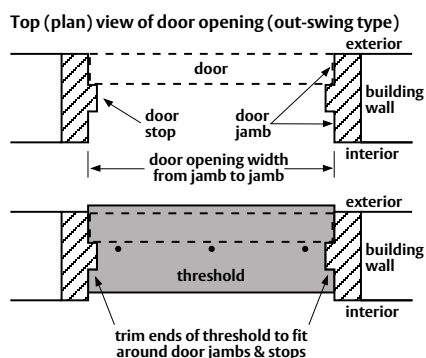

Tools Required:

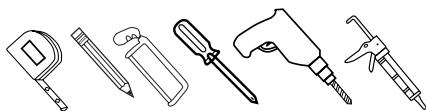

Testing/Ratings:

