


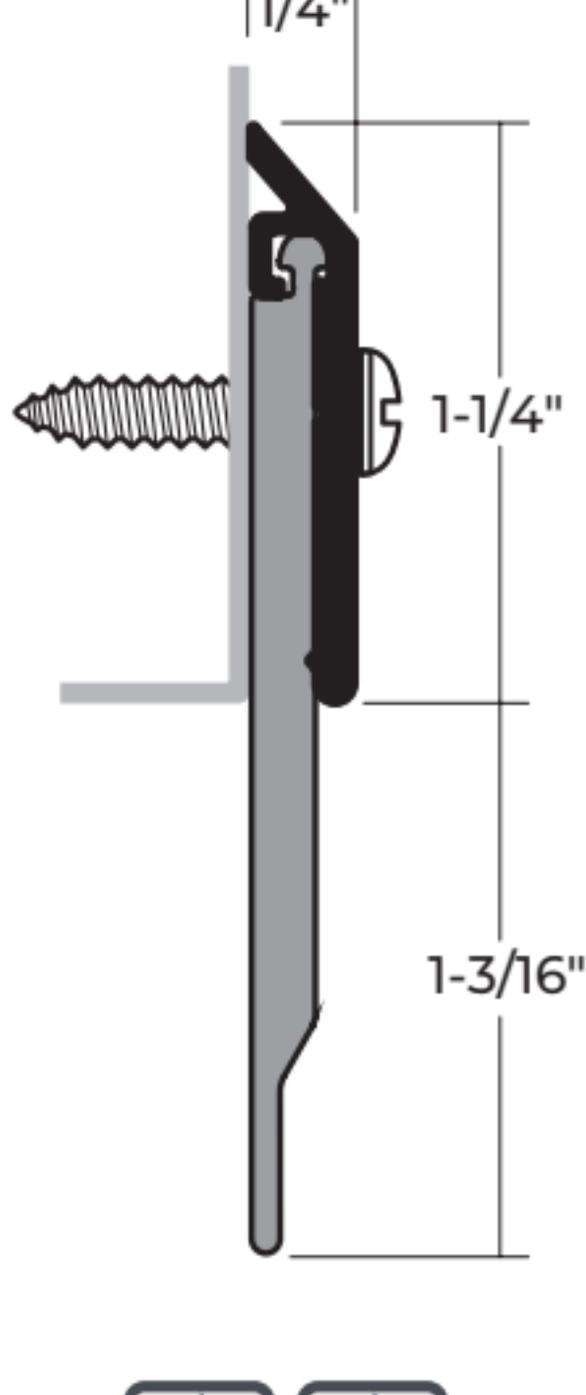

# 199

## Neoprene Door Sweep



**BHMA**  
CERTIFIED

See [ngp.com](http://ngp.com) for  
All Applicable  
Certifications for  
this Product.



POSITIVE PRESSURE  
TESTED GASKETING  
MATERIALS FOR  
FIRE DOORS FOR  
APPLICATION TO  
HOLLOW-METAL-  
TYPE FIRE DOORS  
RATED UP TO 3  
HOURS AND WOOD-  
TYPE FIRE DOORS  
RATED UP TO  
1½ HOURS.  
CATEGORY H

SMOKE AND  
DRAFT CONTROL  
GASKETING  
(CATEGORY H)  
TESTED TO UL  
1784; MEETS  
REQUIREMENTS  
OF NFPA 105, IBC  
FOR USE ON "S"  
LABEL DOORS.



**[ngp.com](http://ngp.com)**  
**1-800-NGP-RUSH**

FAX:  
(800) 255-7874


QUOTES:  
[quotes@ngp.com](mailto:quotes@ngp.com)

ORDERS:  
[orders@ngp.com](mailto:orders@ngp.com)



## INSTALLATION INSTRUCTIONS

# 199

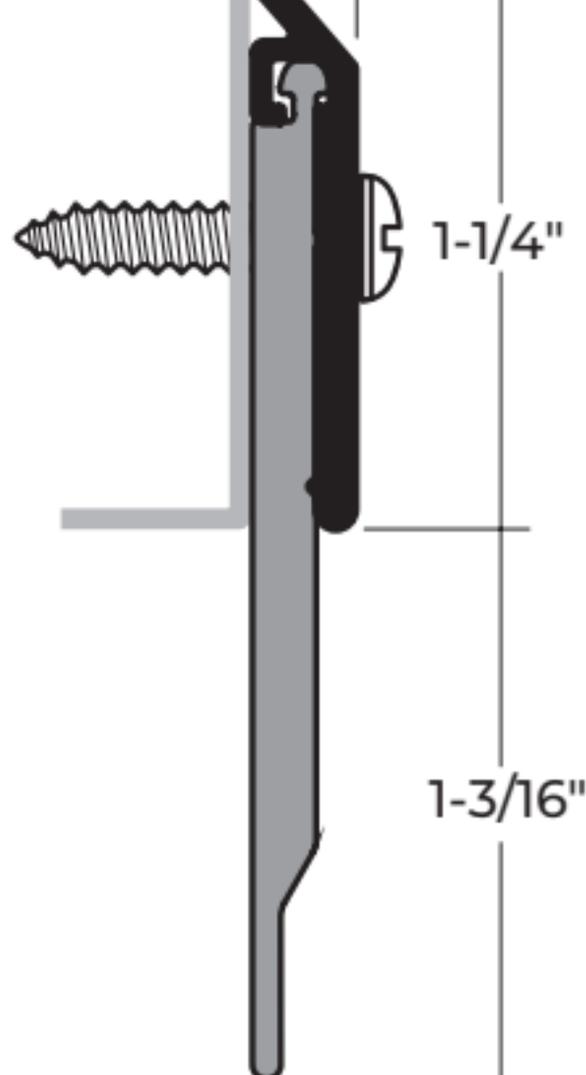

1. Cut sweep to fit.
2. Close door.  
Hold sweep at bottom of door. Tap down until contact is made between the sweep and threshold.
3. Mark screw holes.
4. Drill pilot holes for screws using a  $\frac{7}{64}$ " drill bit.
5. Install with screws provided.
6. Adjust position so sweep does not impede proper closing and latching of door.

**ngp.com**

**1-800-NGP-RUSH**

FAX: (800) 255-7874

QUOTES: [quotes@ngp.com](mailto:quotes@ngp.com)

ORDERS: [orders@ngp.com](mailto:orders@ngp.com)