




203

Neoprene Door Sweep

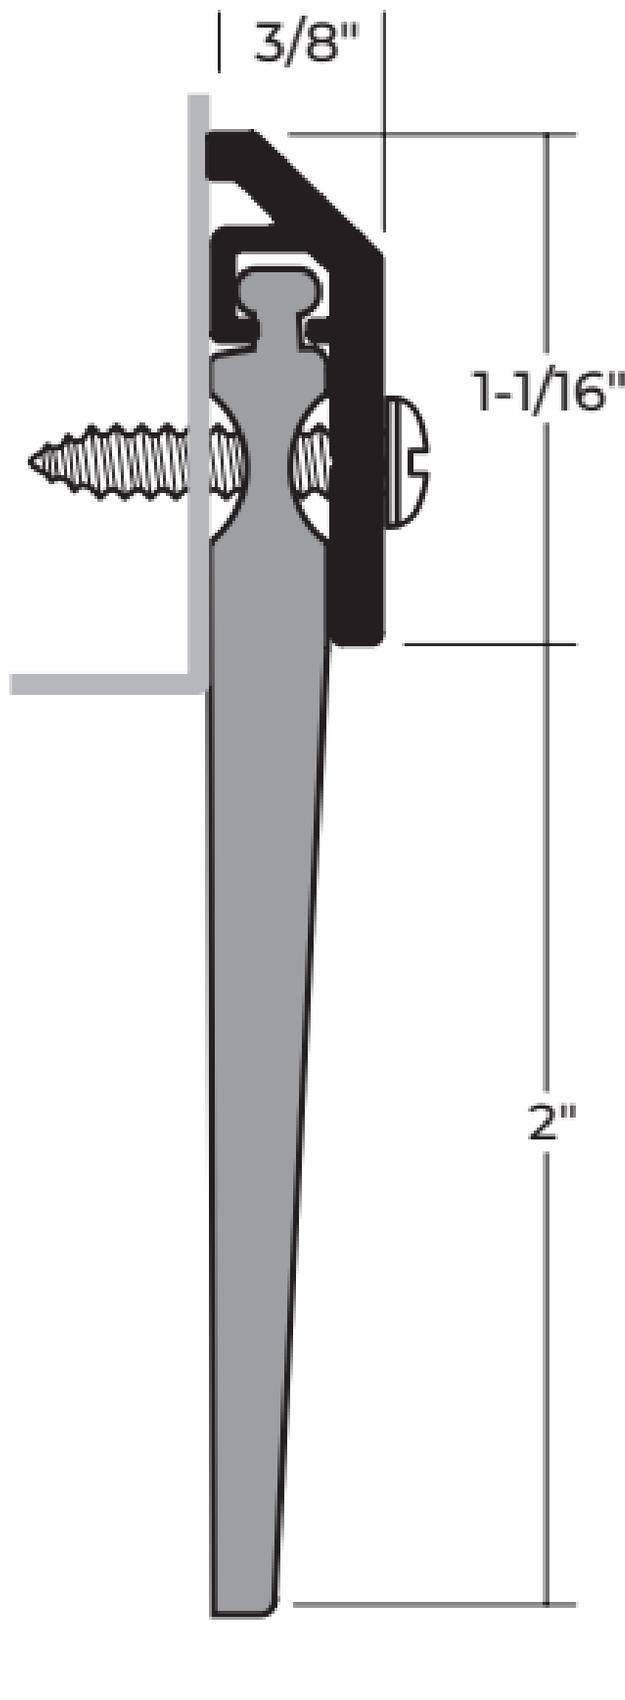

BHMA
CERTIFIED

*See ngp.com for
All Applicable
Certifications for
this Product.*

U

M

A

F

ngp.com

1-800-NGP-RUSH

FAX:

(800) 255-7874

QUOTES:

quotes@ngp.com

ORDERS:


orders@ngp.com



INSTALLATION INSTRUCTIONS

203

1. Cut sweep to fit.
2. Close door.
Hold sweep at bottom of door. Tap down until contact is made between the sweep and threshold.
3. Mark screw holes.
4. Drill pilot holes for screws using a $\frac{7}{64}$ " drill bit.
5. Install with screws provided.
6. Adjust position so sweep does not impede proper closing and latching of door.

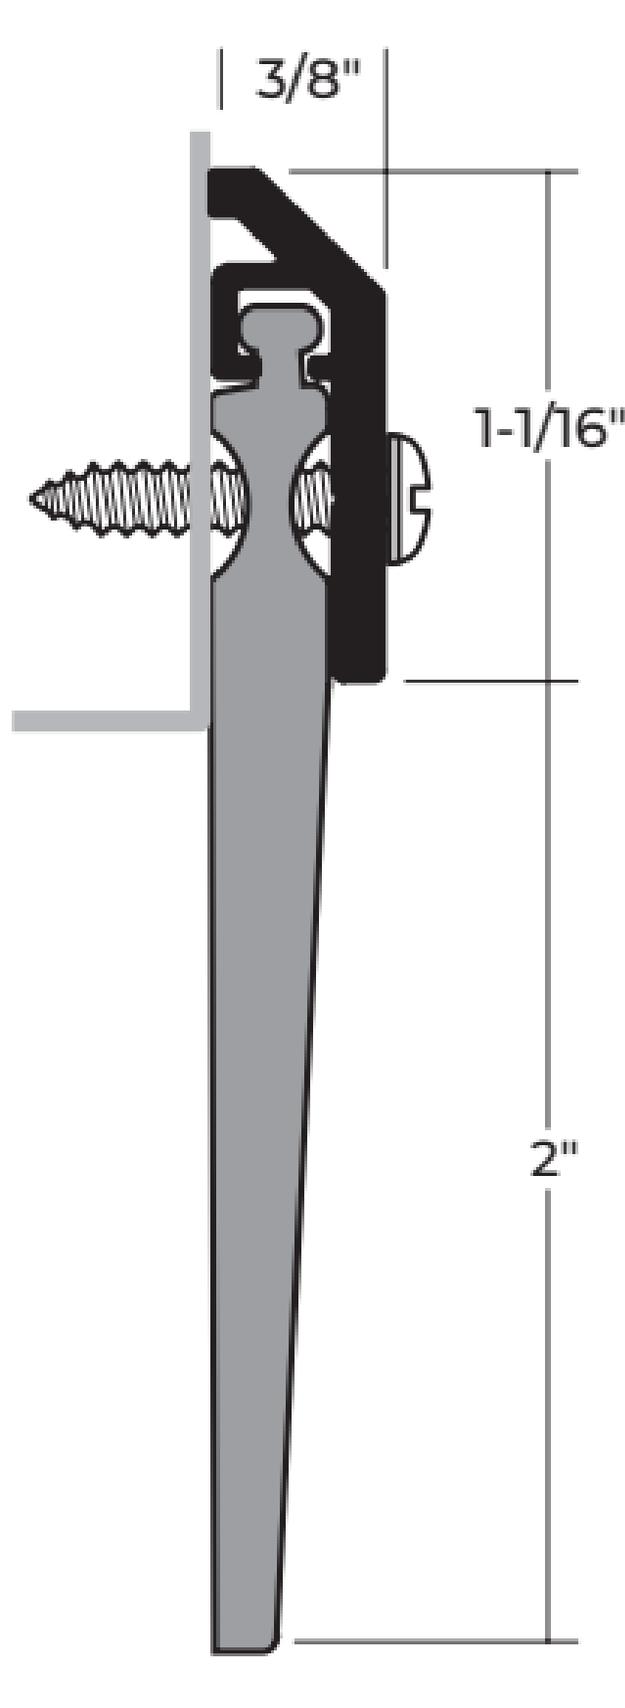

ngp.com

1-800-NGP-RUSH

FAX: (800) 255-7874

QUOTES: quotes@ngp.com

ORDERS: orders@ngp.com

NGP MEMPHIS

4985 East Raines Road

Memphis, TN 38118

CARSON CITY

3689 Arrowhead Drive

Carson City, NV 89706