




## INSTALLATION INSTRUCTIONS

# Aluminum Thermal Break Threshold

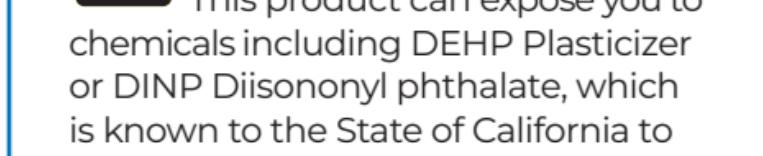

### **WARNING:**

This product can expose you to chemicals including DEHP Plasticizer or DINP Diisononyl phthalate, which is known to the State of California to cause cancer and/or developmental and reproductive harm. For more information, go to P65Warnings.ca.gov.

1. Cut threshold to size required.
2. Notch around door frame if desired.
3. Apply solid beads of adhesive to underside of threshold legs, so when set in place the adhesive spreads to thinly cover base of all legs.  
NOTE: Adhesive must be a type designed to bond PVC, concrete, wood, metal or other material to which threshold is being applied. NGP black silicone adhesive #RR-5007BL is specifically designed for use to install this threshold.
4. Affix threshold to desired location.

**ngp.com**

**1-800-NGP-RUSH**

FAX: (800) 255-7874

QUOTES: quotes@ngp.com

ORDERS: orders@ngp.com

**NGP MEMPHIS**  
4985 East Raines Road  
Memphis, TN 38118

**CARSON CITY**  
3689 Arrowhead Drive  
Carson City, NV 89706