

INSTALLATION INSTRUCTIONS


For 2" Trim

INSTALLATION NOTES:



Two (2) of the components of the window frame must have two compression anchors (pressure-fit screws) on each component. They must be installed opposite from each other. This will help ensure proper installation.

Before installing the components that have compression anchors, adjust the anchors by turning the bolt completely clockwise until it's locked.


Mark the wall around the perimeter of the rough opening 5/8" to give you a visual where the overall frame must be.

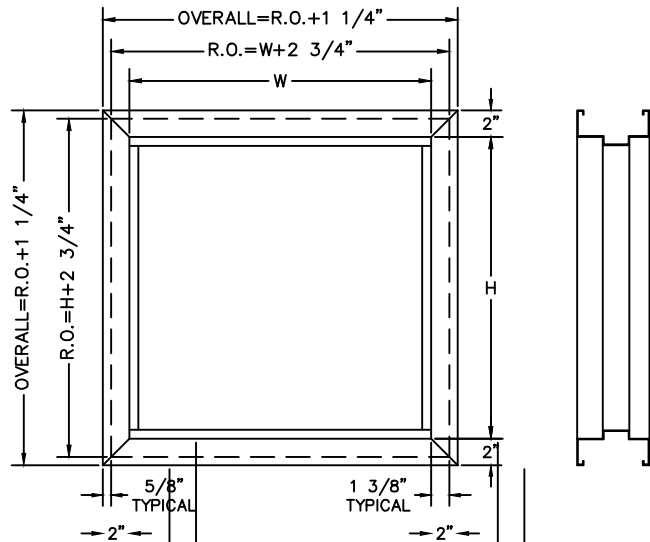

INSTALLATION STEPS:

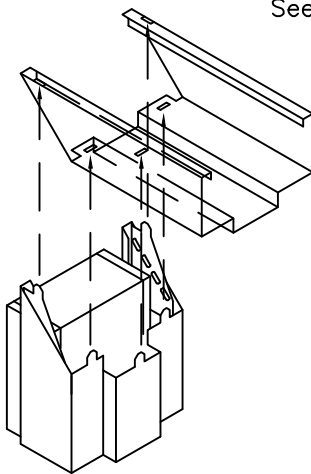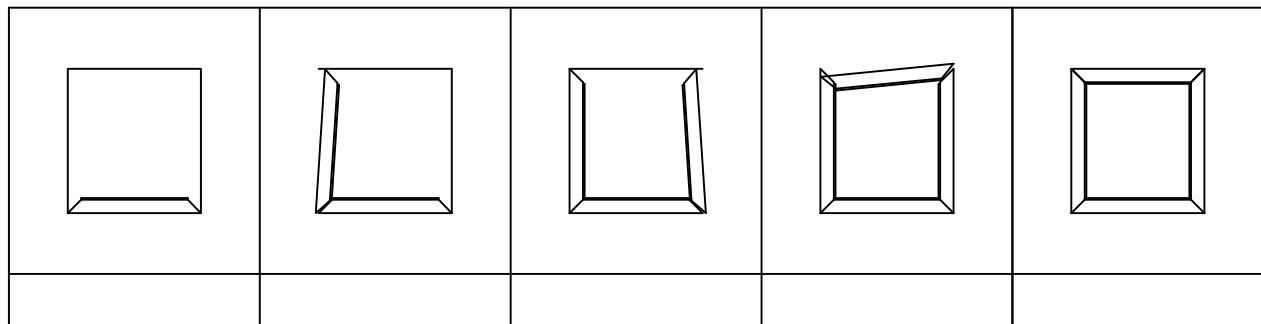

DETAIL "A"

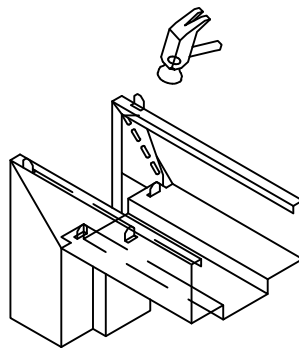

DETAIL "B"

ROUGH OPENING (RO) NOTE:

Order Size (ID-Inside Dimension) + 2 3/4" = Rough Opening (RO)
Order Size is noted as: W (width) x H (Height)