



L-VRSG-2-TB



Vandal Resistant Security Louver

For 1 $\frac{3}{4}$ " Thick Doors




*Undersized $\frac{1}{8}$ "
for Clearance*

Hurricane Rated

Florida Building Code #FL47124
Design Pressure = +/- 75 PSF
Missile level "D" and includes Wind Zone
4 as defined in ASTM E 1996 and FBC
Sections 1609.1.2.2 & R301.2.1.2.1.
Maximum Size 30" x 64"
Hazard - Hurricane

This Product is Not Rated for Use on
Fire-Rated Doors

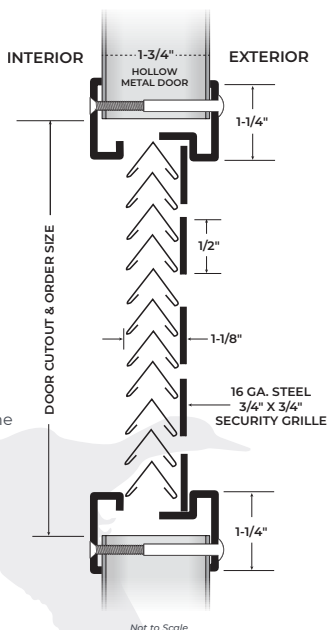

INSTALL L-VRSG-2-TB LOUVER

1. Cut out door in accordance with door manufacturers procedure.
2. If door cut-outs have radius corners it may be necessary to square them out prior to installing the louver.
3. Position outer frame with louver core, in door cut out.
4. Position inner frame and insert and start all thru-bolts before fully tightening.
5. Tighten thru-bolts using crisscross pattern. Use caution when using power screw driving equipment to avoid stripping the material.

FIELD PAINTING: for best results scuff finish with a Scotch-Brite® pad prior to painting.

