

# Architectural Door Accessories

**ASSA ABLOY**

## Rockwood Windstorm Rated LV-WS Door Louver


The global leader in  
door opening solutions

For Installation Assistance, Call Rockwood Products at 800-458-2424 • [www.assaabloydooraccessories.us](http://www.assaabloydooraccessories.us)

### INSTALLATION INSTRUCTIONS

1. Verify that door cut out size is the same as order size of louver. Door Cutout: 12" x 12".
2. 20 Gauge surround channel must be installed in perimeter of louver cut out. It must be factory installed by a UL or Warnock Hersey Windstorm licensed shop.
3. Position the windstorm louver on top with the grille facing the exterior of the opening. Use the #8 flat head machine screws on the interior side of the opening and the #8 threaded sleeve on the exterior.
4. Tighten screws by hand. Power screw drivers are not recommended. Do not over-tighten.

**CAUTION. Fasteners should be tightened evenly all around, but not over tightened. It is recommended to tighten fasteners in alternating sequence to ensure balance.**

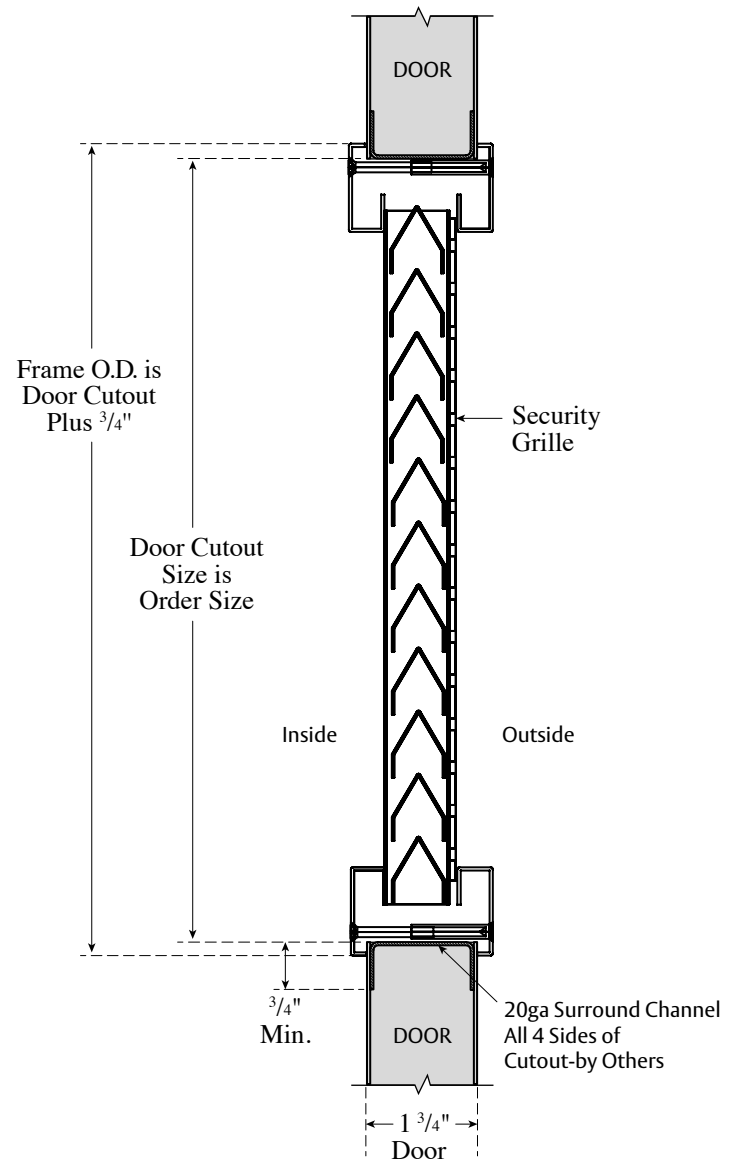

INSTALL IN DOORS WITH A DESIGN LOAD OF 350 FT LBS AND AN IMPACT RATING OF 70 PSF MAX  
DOOR LOUVER FOR USE IN WINDSTORM RATED ASSEMBLY IN ACCORDANCE WITH ASTM E330 (2002), ASTM E1886 (2005), ASTM E1996 (2009), TAS 201 (1994), TAS 202 (1994), AND TAS 203 (1994)

**NOT TO SCALE**

300 Main Street  
Rockwood, PA 15557  
Phone: (800) 458-2424 • Fax: (800) 922-9212  
[www.assaabloydooraccessories.us](http://www.assaabloydooraccessories.us)

Copyright ©2018, ASSA ABLOY Accessories and Door Controls Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Accessories and Door Controls Group, Inc. is prohibited.

I-LL-06-LV-WS 12/18