


PEMKO

1745 ADA WATER RETURN THRESHOLD

Experience a safer
and more open world

Dimensions shown: Inches (millimeters)

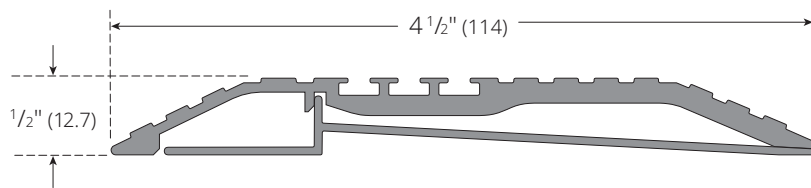

Parts:



Threshold Top Piece: 1745



Water Return Pan: 1745PAN




Mounting
Fastener:
WS10150Z



Plastic
Anchor:
PLA580

Tools Required:

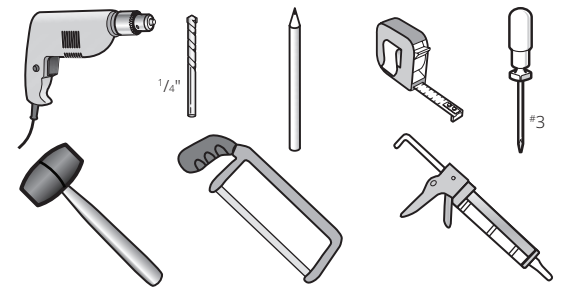

Installation Instructions:

1. Measure the width of the door opening from jamb to jamb and stop to stop. Mark ends of the threshold for trimming if needed.
2. Assemble the ramp piece and threshold together in installation area. Make sure that the top threshold and pan are pieced together properly using the vertical stem of the ramp.
3. Drill pilot holes through the pre-drilled holes in the threshold. This will create the holes for the pan piece and mark where the concrete should be drilled.
4. Remove the threshold and drill approximately 2" into the concrete using a 1/4" drill bit where the concrete has been marked.
5. Clean dust and debris from the holes and surrounding area.
6. Place expanding screw anchors into the concrete by pounding into each hole with a mallet.
7. Add shims as needed to level out the threshold assembly.
8. Caulk on the ground around the entire perimeter of where the threshold will sit, as well as around the predrilled holes.
9. Place the ramp piece and threshold together into the caulked area and secure with the supplied fasteners. Make sure that the top threshold and pan are pieced together properly using the vertical stem of the ramp. No surface caulking is needed.

Pemko
5535 Distribution Dr.
Memphis, TN 38141
www.pemko.com

Memphis, TN USA
P: 800 824 3018
F: 800 243 3656

Ventura, CA USA
P: 800 283 9988
F: 800 283 4050

Vaughan, ON CA
P: 800 461 3007
F: 800 461 8989