

# INSTALLATION INSTRUCTIONS LT-B1, LT-B2, LT-B3, LT-B4

Effective date: August 22, 2024  
Supercedes: All Previous

**ROCKWOOD**  
**ASSA ABLOY**

Experience a safer  
and more open world

**NOT TO SCALE**

## LITE KIT — LT-B1, LT-B2, LT-B3, & LT-B4 SERIES

### Installation Instructions:

#### Fire Rated Metal Vision Lites


These vision lites have been tested in accordance with UBC 7.2, UL 10C (Positive Pressure), UL 10B (Negative Pressure) and are listed with Underwriters Labs (U.L.). Vision lites must have the same rating as the glass, glazing tape or compound, wood or metal door and other such hardware, and be part of an appropriately tested door assembly. Certain fire rated listings may require a specific type or brand of glass with a specific type or brand of glazing tape, to be used in a specific manufacturer's door type in order to achieve a particular rating. See the listing mark stamped into the face of each vision lite, and the door manufacturer's listing label on the wood or metal door.

1. Door cutout size is the order size.
2. Per door manufacturer's listing, the door cutout may require the use of reinforcement or clips.
3. Apply glazing tape (supplied by others) around entire lite or glass perimeter on both sides as shown. **Do not exceed specified glazing space.**

NOTE: Tolerances of door, glass, and lite may impact glazing space.

4. Insert blank side of lite in door cutout. Lay in glass with glazing tape either applied to the lite kit or the glass. Place inner frame in door cutout and secure with screws provided. **CAUTION: fasteners should be tightened evenly all around, but not over tightened. It is recommended to tighten fasteners in alternating sequence to ensure balance. Uneven tightening or over tightening can cause glass breakage.**

Glazing compound applied between frame and glass

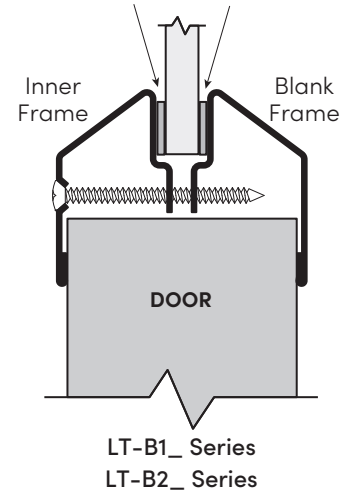

Glazing compound applied between frame and glass

